

Instructions for replacing cartridge on Rainfresh 740/1040/2640 ceramic disc faucet

The replacement cartridge package includes – replacement cartridge (1040-2) & hole cover. **Note:** The faucet may get scratched during removal. That is why an additional hole-cover is included.

Caution: Do not remove bottom seal from the new cartridge as it can cause the ceramic discs to fall out (Fig A).

INSTRUCTIONS

1. Turn water source off at saddle valve or main waterline location.
2. Turn the faucet handle to ON position to release pressure.




3. Pry open the handle hole cover with a small flat-head screwdriver or a similar tool.



4. Unscrew the handle screw with a Philips # 2 screwdriver



5. Pull the handle off the body and unscrew the cartridge cap by hand.

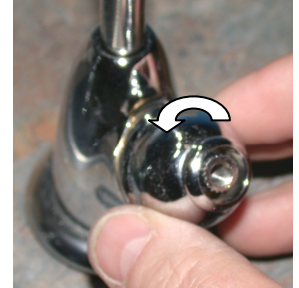

6. Using a wrench unscrew the cartridge from the faucet body & discard old cartridge




7. Screw on the new cartridge into the faucet body and slightly tighten it using a wrench.
Caution: Do not over tighten




8. Hand-tighten cartridge cap and place handle back to position.
Note: Check handle position to verify that the handle is fully vertical in the ON position and horizontal in the OFF position. Remove and re-position if necessary



9. Screw on the handle screw & tighten.

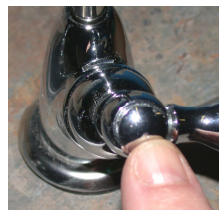

10. Push the new hole cover by hand into the hole cover slot.

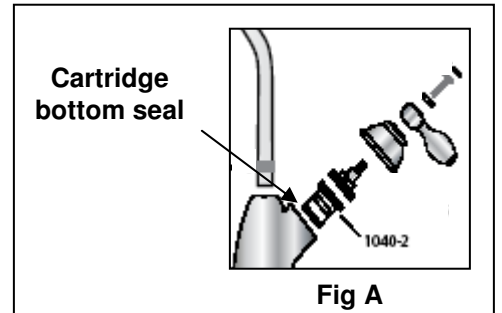

- 10.** Turn handle to OFF position and slowly open the valve you had closed to shut the water off.
- 11.** Check for leaks & faucet ON/OFF operation.
- 12.** You have now replaced the faucet cartridge

For further information, questions or concerns

Help Line: 1-800-667-8072 Toronto & Area: (905) 884-9388

E-Mail : info@rainfresh.ca



ENVIROGARD PRODUCTS LIMITED
446 MAJOR MACKENZIE DR. E., UNIT 6,
RICHMOND HILL, ON L4C 1J2
CANADA